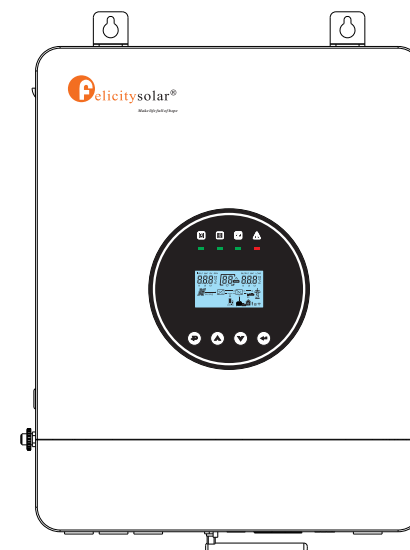


*Solar inverter*

# USER GUIDE

## Solar Inverter

IVEM6048-II



# Contents

|   |           |
|---|-----------|
| <b>ABOUT THIS MANUAL.....</b>                 | <b>01</b> |
| Purpose.....                                  | 01        |
| Scope .....                                   | 01        |
| Safety instructions .....                     | 01        |
| <b>WARNING MARKS.....</b>                     | <b>02</b> |
| <b>INTRODUCTION.....</b>                      | <b>03</b> |
| Features .....                                | 03        |
| Basic system architecture .....               | 03        |
| <b>PRODUCT OVERVIEW.....</b>                  | <b>04</b> |
| <b>SPECIFICATIONS.....</b>                    | <b>05</b> |
| <b>INSTALLATION.....</b>                      | <b>08</b> |
| Safety guidance .....                         | 08        |
| Unpacking and inspection .....                | 09        |
| Preparation .....                             | 09        |
| Mounting the unit.....                        | 09        |
| Battery connection .....                      | 10        |
| AC input /output connection .....             | 11        |
| PV connection .....                           | 13        |
| Final assembly .....                          | 14        |
| Dry contact signal .....                      | 14        |
| Inverter and computer connection.....         | 15        |
| Wiring System for Inverter .....              | 16        |
| <b>OPERATION .....</b>                        | <b>17</b> |
| Power ON/OFF.....                             | 17        |
| Operation and display panel .....             | 17        |
| LCD display icons .....                       | 18        |
| LCD operation flow chart .....                | 20        |
| Base information Page .....                   | 21        |
| Setting Page .....                            | 23        |
| Energy stored data Page.....                  | 29        |
| BMS information Page.....                     | 30        |
| Rated information Page .....                  | 31        |
| Generator Port Use Setup Page .....           | 31        |
| Lithium Battery Communication .....           | 32        |
| <b>PARALLEL INSTALLATION GUIDE .....</b>      | <b>34</b> |
| 1. Introduction.....                          | 34        |
| 2. Mounting the Unit .....                    | 34        |
| 3. LCD Setting and Display .....              | 38        |
| 4. Commissioning .....                        | 38        |
| <b>WARNING CODE TABLE.....</b>                | <b>40</b> |
| <b>FAULT CODE TABLE.....</b>                  | <b>40</b> |
| <b>The Wi-Fi operation Guide in APP .....</b> | <b>44</b> |
| Introduction .....                            | 44        |
| Download and install APP .....                | 44        |

## ABOUT THIS MANUAL

### Purpose

This manual describes the assembly, installation, operation, warning code and fault code of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

### Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

### Safety instructions











**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuse is provided as over-current protection for the battery supply.
11. GROUNDING INSTRUCTIONS -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

## WARNING MARKS

Warning marks inform users of conditions which can cause serious physical injury or death, or damage to the device. They also tell users how to prevent the dangers. The warning marks used in this operation manual are shown below:

| Mark  | Name                    | Instruction  | Abbreviation  |
|---|-------------------------|--|---|
|  Danger  | Danger                  | Serious physical injury or even death may occur if not follow relevant requirements.   |  |
|  Warning | Warning                 | Physical injury or damage to the device may occur if not follow relevant requirements. |  |
|  Forbid  | Electrostatic sensitive | Damage may occur if relevant requirements are not followed.                            |  |
|  Hot     | High temperature        | Do not touch the base of the inverter as it will become hot.                           |  |
| Note  | Note                    | The procedures taken for ensuring proper operation.                                    | Note  |

## INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, MPPT solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

## Features

- Wide PV voltage input range (90VDC-500VDC)
- Maximum PV input current increases to 27A.
- Battery charging power up to 120A
- Pure sine wave inverter
- Built-in MPPT solar charge controller
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload / Over temperature/ short circuit protection
- Inverter running without battery
- Lithium battery activation function.
- Cold start function
- Parallel connection quantity up to 12units for 6KVA model (Battery must be connected)
- Built-in Wi-Fi for mobile monitoring (APP is required)
- The generator input port can be changed to a smart output port
- Control smart output port can customize output duration


## Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:


- Generator or Utility.
- PV modules (option)

Consult with your system integrator for other possible system architectures depending on your requirements.

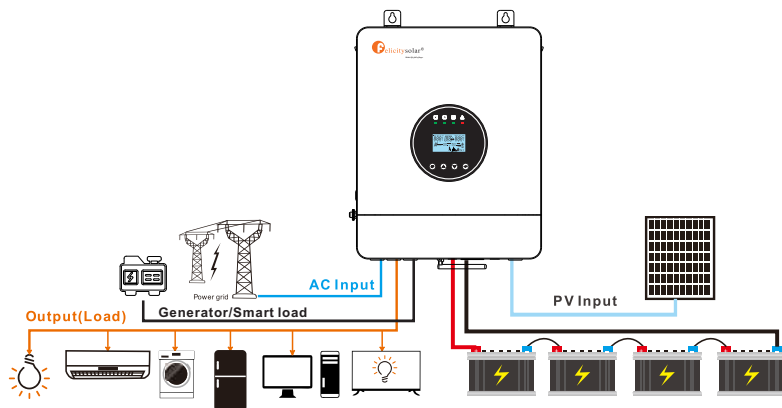This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.



## PRODUCT OVERVIEW

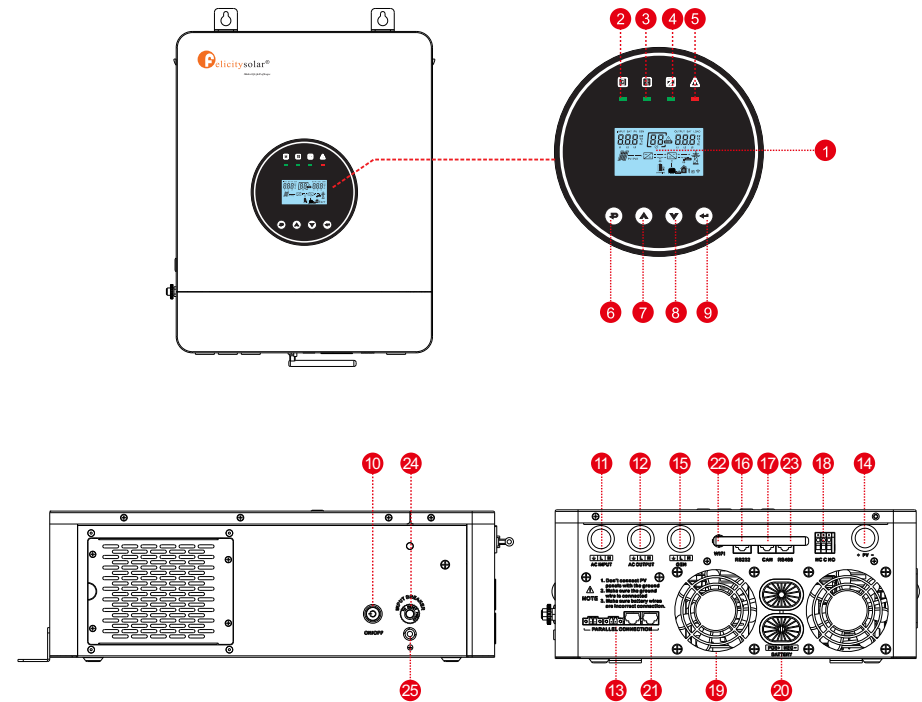



IVEM6048-II

- |                               |                               |                                   |
|-------------------------------|-------------------------------|-----------------------------------|
| 1. LCD display                | 10. Switch                    | 18. Dry contact                   |
| 2. Charging indicator         | 11. AC input port             | 19. Cooling fan                   |
| 3. Utility bypass indicator   | 12. AC output port            | 20. Battery input connection port |
| 4. Inverter indicator         | 13. Current sharing port      | 21. Parallel communication port   |
| 5. Fault or warning indicator | 14. PV input connection port  | 22. WIFI antenna                  |
| 6. ESC button                 | 15. Generator/Smart load port | 23. RS-485 communication port     |
| 7. UP button                  | 16. RS-232 Communication port | 24. AC Input breaker              |
| 8. DOWN button                | 17. CAN communication port    | 25. PE                            |
| 9. ENTER button               |                               |                                   |


\* 17 The BMS communication port only supports Felicitysolar batteries



## SPECIFICATIONS

| Line Mode Specifications        |  |
|---------------------------------|--|
| Model                           | IVEM6048-II  |
| Rated Output Power              | 6000VA   |
|                                 | 6000W  |
| Nominal DC Input Voltage        | 48V  |
| Input Voltage Waveform          | Sinusoidal (utility or generator)  |
| Nominal Input Voltage           | 230Vac   |
| Low Line Voltage Disconnect     | 170Vac±7V (UPS); 90Vac±7V (Appliances)   |
| Low Loss Voltage Re-connect     | 180Vac±7V (UPS); 100Vac±7V (Appliances)  |
| High Line Voltage Disconnect    | 280Vac±7V  |
| High Line Voltage Re-connect    | 270Vac±7V  |
| Max AC Input Voltage            | 280Vac   |
| Nominal Input Frequency         | 50Hz / 60Hz (Auto detection)   |
| Low Line Frequency Disconnect   | 40±1Hz   |
| Low Line Frequency Re-connect   | 42±1Hz   |
| High Line Frequency Disconnect  | 65±1Hz   |
| High Line Frequency Re-connect  | 63±1Hz   |
| Output Voltage Waveform         | As same as input waveform  |
| Output Short Circuit Protection | Line mode: Circuit Breaker<br>Battery mode: Electronic Circuits  |
| Efficiency (Line Mode)          | >95% (Rated R load, battery full charged)  |
| Transfer Time (Single unit)     | 10ms typical (UPS); 20ms typical (Appliances)  |
| Transfer Time (Parallel)        | 50ms typical   |
| Output power derating           | When AC input voltage drops to 170V, the output power will be de-rated.<br> |
|                                 | When DC input voltage drops to 48V, the output power will be de-rated.<br>  |
| Pass Through Without Battery    | Yes  |
| Max. Bypass Overload Current    | 40A  |
| Max. Inverter/Rectifier Current | 40A/6000W  |

| Utility Charge Mode Specifications |                                 |
|------------------------------------|---------------------------------|
| Nominal Input Voltage              | 230Vac                          |
| Input Voltage Range                | 90~280Vac                       |
| Nominal Output Voltage             | Dependent on battery type       |
| Max. Charge Current                | 120A                            |
| Charge Current Regulation          | 10-120A (Adjustable unit is 1A) |
| Over Charge Protection             | Yes                             |
| Solar Charging & Grid Charging     |                                 |
| Max. PV Open Circuit Voltage       | 500V                            |
| PV Voltage Working Range           | 90V-450V                        |
| Max. Input Power                   | 7500W                           |
| Max. Solar Charging Current        | 120A                            |
| Max. Charging Current(PV+Grid)     | 120A                            |
| Max. Input Current                 | 27A                             |
| Min. Startup Voltage               | 95V                             |

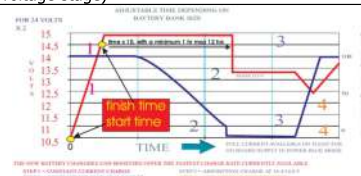







| Charge Algorithm     |   |                       |       |
|----------------------|---|-----------------------|-------|
| Algorithm            | <b>Three stage:</b><br>Boost CC (Constant current stage) -><br>Boost CV (Constant voltage stage) -><br>Float (Constant voltage stage) |                       |       |
| Charging Curve       |   |                       |       |
| Battery Type Setting | Battery Type  | Boost CC/CV           | Float |
|                      | AGM   | 56.4V                 | 54V   |
|                      | Flooded   | 58.4V                 | 54V   |
|                      | Self - defined  | Adjustable, up to 60V |       |
|                      | Lithium   |                       |       |

| Inverter Mode Specifications                            |   |
|---|---|
| Model   | IVEM6048-II   |
| Rated Output Power                                      | 6000VA  |
|   | 6000W   |
| Nominal DC Input Voltage                                | 48V   |
| Output Voltage Waveform                                 | Pure sine wave  |
| Nominal Output Voltage                                  | 230Vac±5%   |
| Nominal Output Frequency (Hz)                           | 50±0.3Hz/60Hz±0.3Hz (Adjustable)  |
| Parallel capability                                     | Yes, up to 12 units   |
| Peak Efficiency   | 93%   |
| Over-Load Protection (SMPS load)                        | Load>200%,200ms / Load >150%,5.5s<br>Load >120%,7.5s / Load >105% 10.5s |
| Surge Rating  | 2* rated power for 5s   |
| Capable of Starting Electric                            | Yes   |
| Output Short Circuit Protection                         | Yes   |
| Cold Start Voltage                                      | 46V   |
| Low Battery Alarm<br>Load < 50%<br>@Load ≥ 50%          | 45.0V   |
|   | 44.0V   |
| Low Battery Alarm Recovery<br>Load < 50%<br>@Load ≥ 50% | 47.0V   |
|   | 46.0V   |
| Low DC Input Shut-down<br>Load < 50%<br>@Load ≥ 50%     | 43.0V   |
|   | 42.0V   |
| High DC Input Alarm & Fault                             | 62V±0.4V  |
| High DC Input Recovery                                  | 60V±0.4V  |
| General Specifications                                  |   |
| Operating Temperature                                   | -10C°~50C°  |
| Range Storage Temperature                               | -15C°~60C°  |
| Net Weight (Kg)   | 12.5kg  |
| Product Size (D*W*H)                                    | 420 x 335 x 142mm   |
| Package Dimension (D*W*H)                               | 512 x 417 x 216mm   |

## INSTALLATION









### Safety Guidance

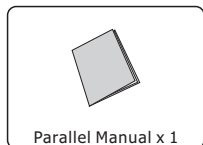
Warning marks inform users of conditions which can cause serious physical injury or death, or damage to the device. They also tell users how to prevent the dangers. The warning marks used in this operation manual are shown below:

|   |  |
|---|--|
|    | <ul style="list-style-type: none"> <li>After receiving this product, first confirm the product package is intact. If any question, contact the logistic company or local distributor immediately.</li> <li>The installation and operation of inverter must be carried out by professional technicians who have received professional trainings and thoroughly familiar with all the contents in this manual and the safety requirements of the electrical system.</li> </ul> |
|    | <ul style="list-style-type: none"> <li>Do not carry out connection/disconnection, unpacking inspection and unit replacement operations on the inverter when power source is applied. Before wiring and inspection, users must confirm the breakers on DC and AC side of inverter are disconnected and wait for at least 5 minutes.</li> </ul>  |
|    | <ul style="list-style-type: none"> <li>Ensure there is no strong electromagnetic interference caused by other electronic or electrical devices around the installation site.</li> <li>Do not refit the inverter unless authorized.</li> <li>All the electrical installation must conform to local and national electrical standards</li> </ul>   |
|    | <ul style="list-style-type: none"> <li>Do not touch the housing of the inverter or the radiator to avoid scald as they may become hot during operation.</li> </ul>   |
|    | <ul style="list-style-type: none"> <li>Ground with proper technics before operation.</li> </ul>  |
|    | <ul style="list-style-type: none"> <li>Do not open the surface cover of the inverter unless authorized. The electronic components inside the inverter are electrostatic sensitive. Do take proper anti-electrostatic measures during authorized operation.</li> </ul>  |
|   | <ul style="list-style-type: none"> <li>The inverter needs to be reliably grounded.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>Ensure that DC and AC side circuit breakers have been disconnected and wait at least 5 minutes before wiring and checking.</li> </ul>   |

### Unpacking and Inspection


Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

|  |  |   |  |
|--|--|---|--|
| <br>Inverter unit x 1     | <br>Manual x 1        | <br>Parallel communication cable x 1 | <br>Current sharing cable x 1       |
| <br>U-shaped terminal x 2 | <br>RJ45 Terminal x 1 | <br>Expansion bolt x 2               | <br>Wall Hangers x 2 and Screws x 4 |



## Preparation

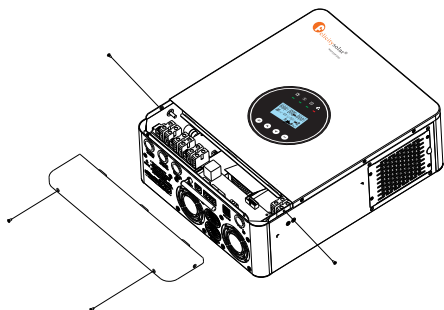
Before connecting all wirings, please take off bottom cover by removing four screws as shown below.



## Mounting the Unit


Consider the following points before selecting where to install:

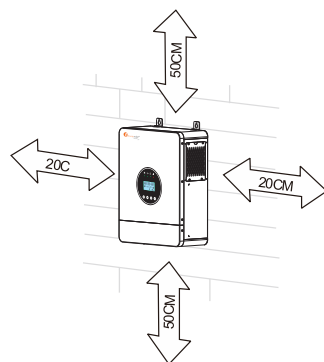- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.



**SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

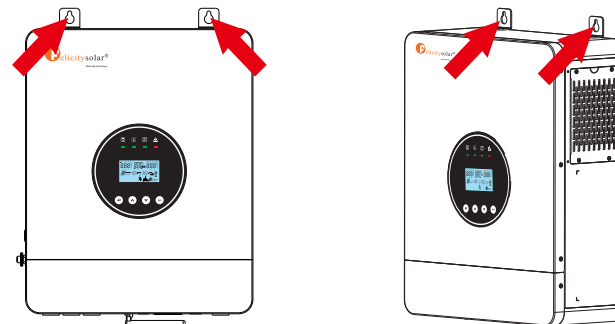Install the unit by screwing three screws. It's recommended to use M4 or M5 screws.



## Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

**WARNING!** All wiring must be performed by a qualified personnel.

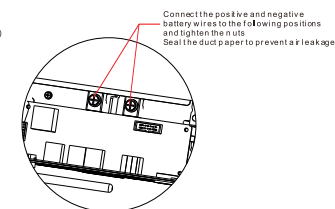
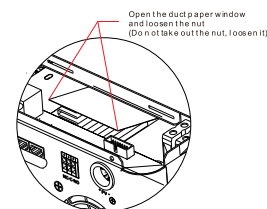
**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

**Recommended battery cable and terminal size:**

| Model | Wire Size | Cable (mm <sup>2</sup> ) | Torque Value(Max) |
|-------|-----------|--------------------------|-------------------|
| 6KVA  | 1*2AWG    | 35                       | 2.5Nm             |

**Please follow below steps to implement battery connection:**

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery.
3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.





## WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



**CAUTION!!** Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.

**CAUTION!!** Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

**CAUTION!!** Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

## AC Input/Output Connection



**CAUTION!!** Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 32A for 3KVA and 50A for 5KVA.



**CAUTION!!** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

### Suggested cable requirement for AC wires

| Model | Gauge | Cable (mm <sup>2</sup> ) | Torque Value |
|-------|-------|--------------------------|--------------|
| 6KVA  | 8 AWG | 10                       | 1.4~ 1.6Nm   |

Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnector first.

2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.

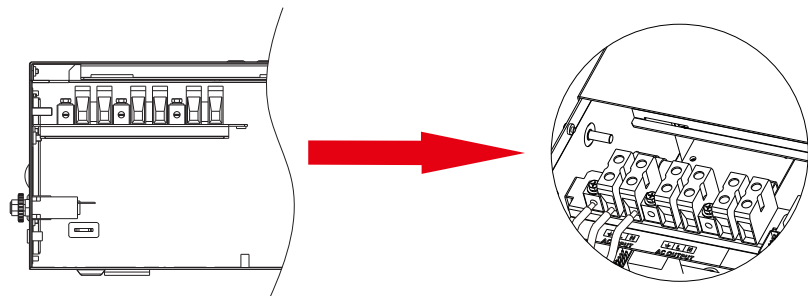

3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⏏) first.



→Ground (yellow-green)

L→LINE (brown or black)

N→Neutral (blue)



## WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Generator interface operation  
The generator interface has two multiplexing modes: generator input and smart load output. The default is input mode. If you want to switch to output mode, refer to the "LCD Settings" section for details  
Insert AC output / AC input wires according to polarities indicated on terminal block and tighten terminal screws.

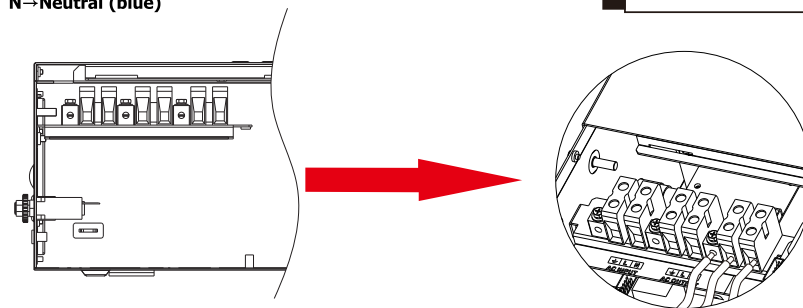

Be sure to connect PE protective conductor (⏏) first.



→Ground (yellow-green)

L→LINE (brown or black)

N→Neutral (blue)



5. Insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

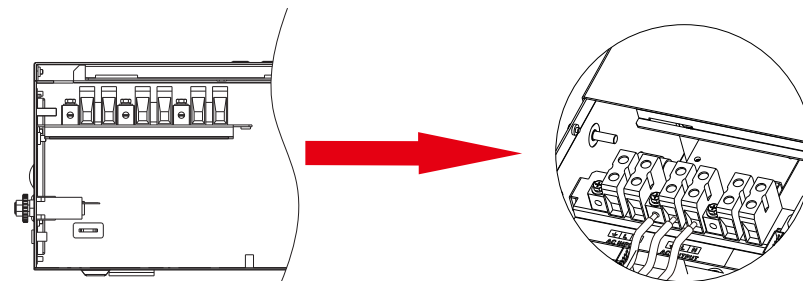

Be sure to connect PE protective conductor (⏏) first.



→Ground (yellow-green)

L→LINE (brown or black)

N→Neutral (blue)



- Make sure the wires are securely connected.

## CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

## PV Connection



**CAUTION:** Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

**WARNING!** All wiring must be performed by qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

| Model | Cable Size | Cable (mm <sup>2</sup> ) | Torque     |
|-------|------------|--------------------------|------------|
| 6KVA  | 10~12 AWG  | 4~6                      | 1.4~1.6 Nm |

**Warning:** Inverter accepts: single crystal, polycrystal with Class A rating and CIGS module because it is non-isolated. To prevent the fault, do not connect the PV modules that may leak current to the inverter. For instance, when using the PV module, ensure that there is no grounding connection. Because Grounded PV modules can cause leakage current in the inverter.

### PV Module Selection:


When selecting proper PV modules, please be sure to consider below parameters:

- Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
- Max. power voltage (Vmp) should be during PV array MPPT voltage range.


| Solar Charging Mode                |              |
|------------------------------------|--------------|
| INVERTER MODEL                     | 6KVA         |
| Max. PV Array Open Circuit Voltage | 500V         |
| PV Array MPPT Voltage Range        | 95Vdc~430Vdc |

Please follow below steps to implement PV module connection:

- Remove insulation sleeve 10 mm for positive and negative conductors.
- Check correct polarity of connection cable from PV modules and PV input



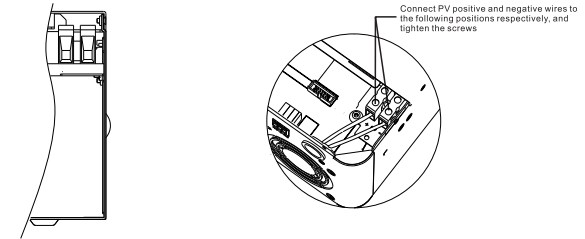
connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.



- Make sure the wires are securely connected.

## Final Assembly

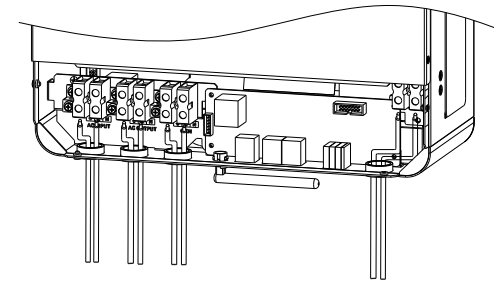After connecting all wirings, please put bottom cover back by screwing two screws as shown below.




## Dry Contact


There is one dry contact (3A/250VAC) available on the inverter.

| Unit Status | Condition  | Dry contact port: |        |
|-------------|--|-------------------|--------|
|             |  | NC & C            | NO & C |
| Power Off   | Unit is off and no output is powered.  | Close             | Open   |
|             | Battery voltage < Setting value in Program 12  | Open              | Close  |
| Power On    | Battery voltage > Setting value in Program 13 or battery charging reaches floating stage | Close             | Open   |
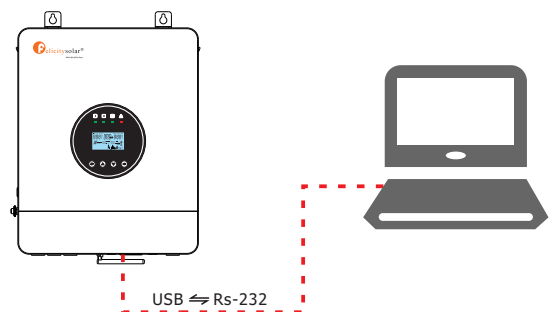
## Inverter and computer connection




Pin Assignment for RS232 Communication Port

|       | PIN 1   | PIN 2   | PIN 3 | PIN 4 | PIN 5 | PIN 6 | PIN 7 | PIN 8 |   |
|-------|---------|---------|-------|-------|-------|-------|-------|-------|---|
| RS232 | RS232TX | RS232RX | +12V  | GND   | NC    | NC    | NC    | GND   |  |

\*Users need to purchase their own RS232 conversion USB interface cable to connect the computer

\*If you need to update the firmware library, please contact after-sales personnel

## Wiring System for Inverter

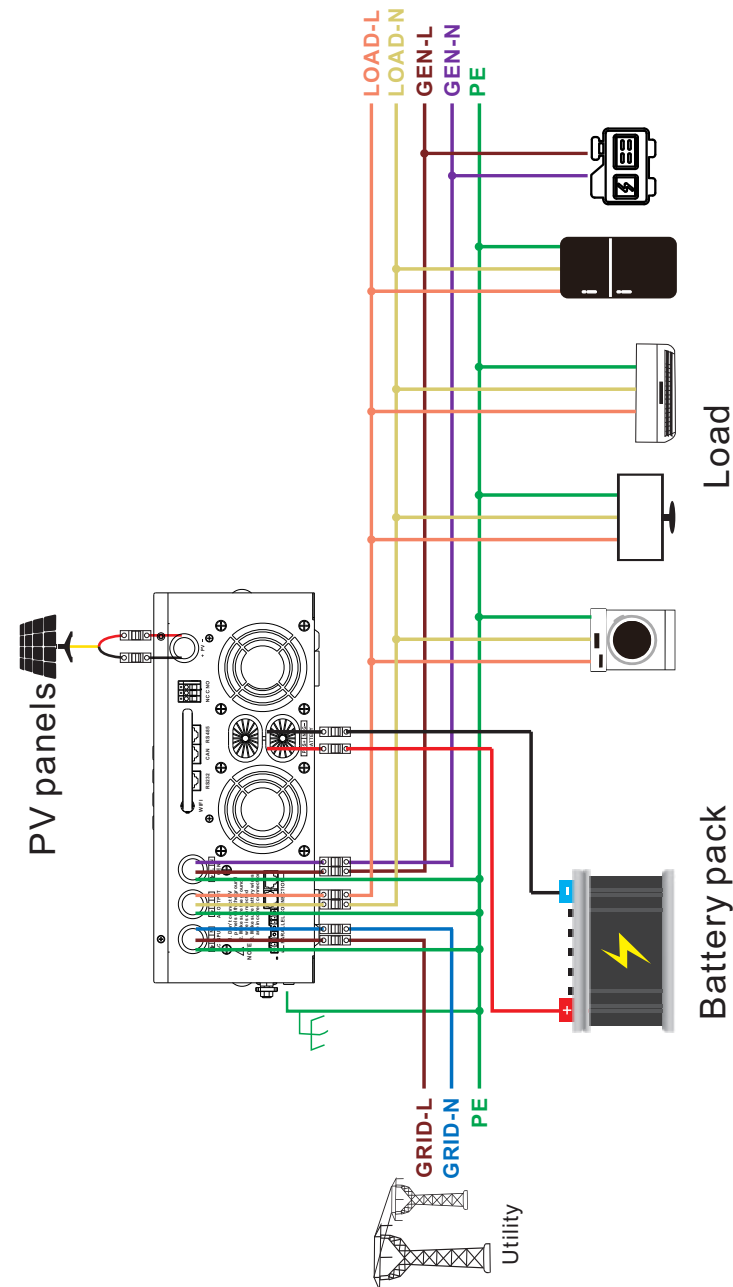

**NOTE 1:** The power grid N line and off grid N line cannot be shared and connected independently

## OPERATION

### Power ON/OFF







Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the bottom of the case) to turn on the unit.

## Operation and Display Panel

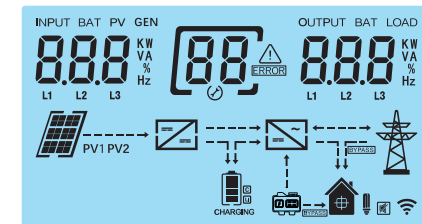
The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.















| Function Key | Icon | Description                                 |
|--------------|------|---|
| ESC          |      | To previous page                            |
| UP           |      | To go to previous selection                 |
| DOWN         |      | To go to next selection                     |
| ENTER        |      | To confirm the selection or go to next page |

| LED Indicator      | Icon   | Color | State    | Description                               |
|--------------------|--|-------|----------|---|
| Battery            |   | Green | solid    | The battery is full.                      |
|                    |  |       | Flashing | The battery is charging.                  |
|                    |  |       | dim      | The battery is not charged.               |
| Utility            |   | Green | solid    | Inverter is running in utility mode.      |
|                    |  |       | dim      | Inverter is not running in utility mode.  |
| Inverter           |   | Green | solid    | Inverter is running in off-grid mode.     |
|                    |  |       | dim      | Inverter is not running in off-grid mode. |
| Fault              |   | Red   | solid    | Inverter works in fault event.            |
|                    |  |       | Flashing | Inverter works in warning event.          |
|                    |  |       | dim      | Inverter works normally.                  |
| Buzzer Information |  |       |          |   |
| Buzzer beep        | Turn on/off the inverter, the buzzer will last for 2.5s.<br>Press any button, the buzzer will last for 0.1s.<br>Hold on the “ENTER” button, the buzzer will last for 3s.<br>If in fault event, the buzzer will keep going.<br>If in warning event, the buzzer will beep discontinuous (Check more information on the chapter of “Warning Code Table”). |       |          |   |


## LCD Display Icons


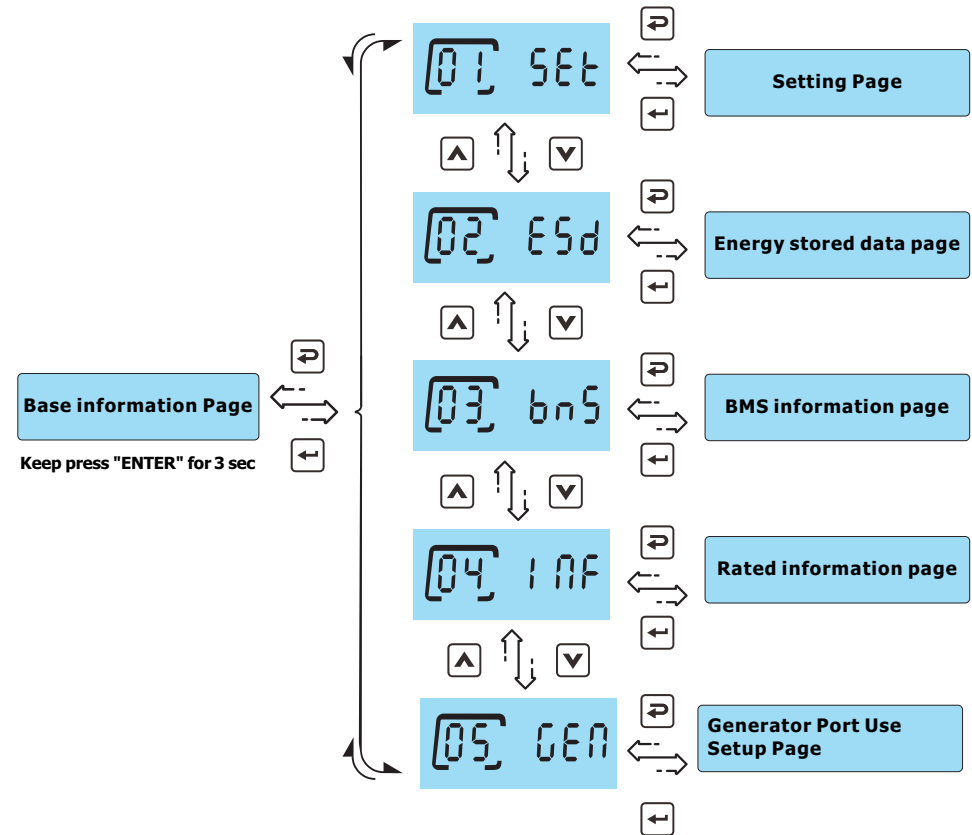
| Icon  | Function description  |
|---|---|
| Input Source Information  |   |
| INPUT BAT PV<br>888 KW<br>VA<br>%<br>Hz   | Indicate input voltage, input frequency, PV voltage, PV power, battery voltage and charger current. |
| Configuration Program and Fault Information                                       |   |
|   | Indicates the setting programs.   |
| <br>Warning:  flashing with warning code.<br><br>Fault:  lighting with fault code |   |

| Output Information  |  |
|---|--|
| <div> <div>OUTPUT BAT LOAD</div> <div> <div>8.8.8</div> <div> <div>KW</div> <div>VA</div> <div>%</div> <div>Hz</div> </div> </div> </div> | Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current. |
| Battery Information   |  |
|    | Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100%.  |
|    | Indicates Lithium battery type.  |
|    | Indicates communication is built between inverter and battery.   |
| Mode Operation Information  |  |
|    | Indicates the utility.   |
| <b>BYPASS</b>   | Indicates load is supplied by utility directly.  |
|    | Indicates the inverter/charger is working.   |
|    | Indicates the PV panels.   |
|    | Indicates PV MPPT is working.  |
|    | Indicates the WIFI link  |
|   | Indicates the first AC output  |
|    | Indicates the second AC output   |
|    | Indicates the generator input  |
| Mute Operation  |  |
|    | Indicates unit alarm is disabled.  |

## LCD operation flow chart



















On base information page, pressing and holding "ENTER" key for 3 sec, the unit will enter parameters page. Press "UP" or "DOWN" key to switch the selection and press "ENTER" key to enter selected page. Press "ESC" key to back to previous page.




## Base information Page

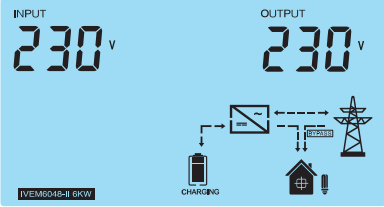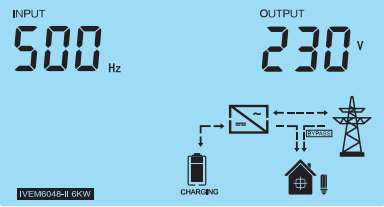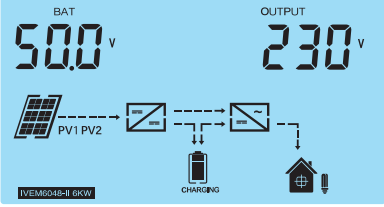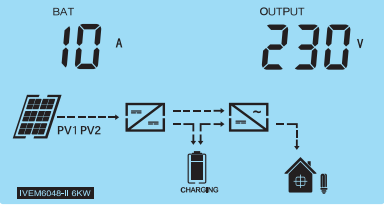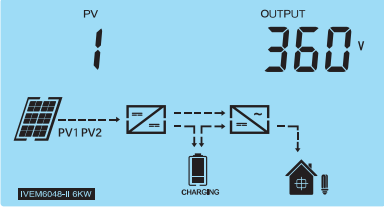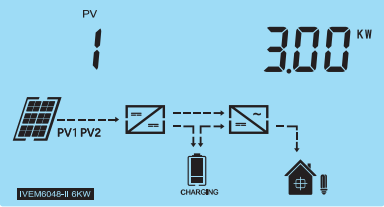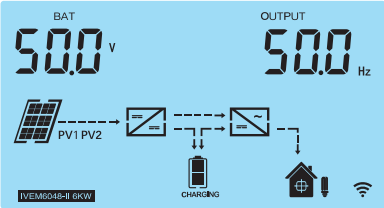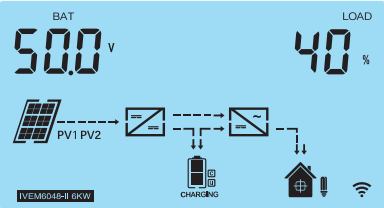The base information will be switched by pressing "UP" or "DOWN" key. The selectable information is switched as below order:

|   |   |
|---|---|
| <b>Input voltage / Output voltage</b><br>Utility voltage is 230V, output voltage is 230V<br>            | <b>Input frequency / Output voltage</b><br>Utility frequency is 50.0Hz, output voltage is 230V<br> |
| <b>Battery voltage / Output voltage</b><br>Battery voltage is 50.0V, output voltage is 230V<br>         | <b>Charging current / Output voltage</b><br>Charging current is 10A, output voltage is 230V<br>    |
| <b>PV1 voltage</b><br>PV1 voltage is 360V<br>  | <b>PV1 power</b><br>PV1 power is 3.00kW<br>   |
| <b>Battery voltage / Output frequency</b><br>Battery voltage is 50.0V, output frequency is 50.0Hz<br> | <b>Battery voltage / Load percentage</b><br>Battery voltage is 50.0V, load percentage is 40%<br> |
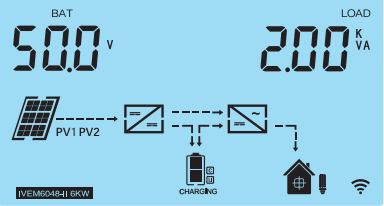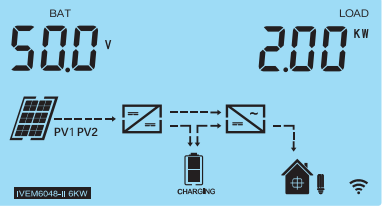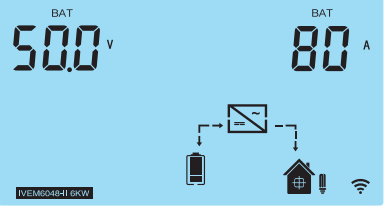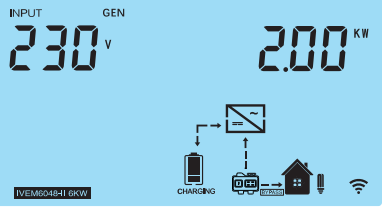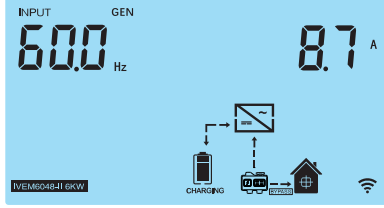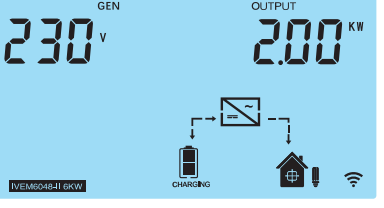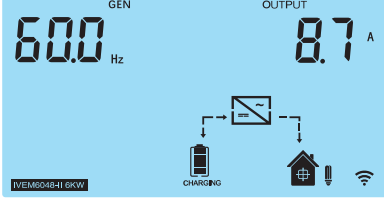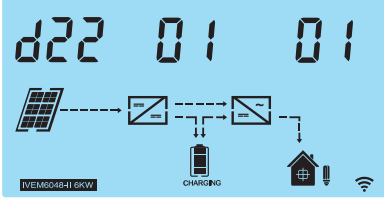
|  |   |
|--|---|
| <b>Battery voltage / Load VA</b><br>1. Battery voltage is 50.0V, output wattage is 2.00kVA<br>  | <b>Battery voltage / Load wattage</b><br>Battery voltage is 50.0V output wattage is 2.00kW<br>                   |
| <b>Battery voltage / Discharging current</b><br>Battery voltage is 50.0V, discharging current is 80A<br>                                      | <b>Generator voltage/generator power</b><br>Indicates the generator input 230V, input 2KW power<br>              |
| <b>Generator frequency/Generator current</b><br>Indicates that the generator input frequency is 60Hz and the input current is 8.7A<br>       | <b>Smart load Voltage / Smart load power</b><br>Indicates that the smart load output 230V, output 2KW power<br> |
| <b>Smart load frequency/Smart load current</b><br>Indicates that the Smart load output frequency is 60Hz and the output current is 8.7A<br> | <b>Date</b><br>2022-01-01<br>  |

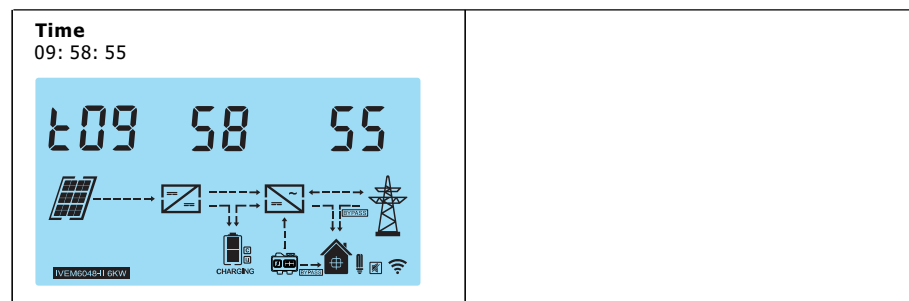

## Setting Page

Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

### Setting items:

|    |                             | Selectable option  |   |
|----|-----------------------------|--------------------|---|
| 00 | Exit setting                |                    |   |
| 01 | Output voltage setting      | 220V<br>           | Output voltage configuration                          |
|    |                             | 230V<br>           |   |
|    |                             | 240V<br>           |   |
| 02 | Output frequency setting    | 50Hz<br>           | Output frequency configuration                        |
|    |                             | 60Hz<br>           |   |
| 03 | Utility input range setting | Appliance mode<br> | APL should be selected, when the utility is not well. |
|    |                             | UPS mode<br>       |   |

|    |   |   |   |
|----|---|---|---|
| 04 | Output source priority  | Utility >> PV >> Battery<br>  | Utility provides power to the loads first. PV and battery will provide power to loads only when utility is not available.   |
|    |   | PV >> Utility >> Battery<br>  | PV provides power to the loads first. If PV is not sufficient, utility will supply power the loads at the same time. Battery will provide power to loads only when utility is not available.                                    |
|    |   | PV >> Battery >> Utility<br>  | PV provides power to the loads first. If PV is not sufficient, battery will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to the setting point in program 12. |
| 05 | Charger priority  | <b>If inverter is working in utility mode, charger priority can be set as below. However, when inverter is working in Battery mode, only PV can charge battery.</b> |   |
|    |   | PV first (Default)<br>  | PV will charge battery first. Utility will charge battery only when PV is unavailable.  |
|    |   | PV and Utility<br>  | PV and utility will charge battery together.  |
| 06 | Max charging current (Utility charge current + PV charging current) | PV Only<br>   | Only PV can charge the battery.   |
|    |   | Default: 60A<br>  | Setting range is from 10A to 120A. Increment of each click is 1A.   |
| 07 | Max utility charging current setting                                | Default: 30A<br>  | Setting range is from 10A to 100A. Increment of each click is 1A.   |

|    |  |   |  |
|----|--|---|--|
| 08 | Battery type setting   | The battery type is AGM<br>bAt [08] AGM   | If "Self-defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 9, 10 and 11.<br>If "Lib" is selected, inverter can charge Lithium battery when the Lithium battery need to be activated. Please make sure Lithium battery is connected before you start up inverter.<br>If inverter doesn't connect battery or Lithium battery, do not select "Lib" battery type. |
|    |  | The battery type is Flooded<br>bAt [08] FLd   |  |
|    |  | The battery type is self-defined<br>bAt [08] USE  |  |
|    |  | The battery type is Lib<br>bAt [08] Lib   |  |
| 09 | Bulk charging voltage setting (C.V voltage)  | Default: 56.4V<br>Cv [09] 56.4 v  | If "self-defined" is selected in program 8, this program is enabled. Setting range is from 48.0V to 60.0V. Increment of each click is 0.1V   |
| 10 | Floating charging voltage  | Default: 54.0V<br>FLv [10] 54.0 v   | If "self-defined" is selected in program 8, this program is enabled. Setting range is from 48.0V to 60.0V. Increment of each click is 0.1V   |
| 11 | Low DC cut-off voltage or Low SOC  | If battery power is only power source available, inverter will shut down.<br>If PV energy and battery power are available, inverter will charge battery without AC output.<br>If PV energy, battery power and utility are all available, inverter will transfer to line mode and provide output power to loads. |  |
|    |  | Default: 42.0V<br>bCv [11] 42.0 v   | "Self-defined" is selected in program 8, the range is set from 42.0V to 54.0V, with an increment of 0.1V per click.  |
|    |  | Default: 0%<br>bCv [11] 0 %   | If "Lib" is selected in program 8, the range is set from 0% to 90%, with an increment of 5% per click.   |
| 12 | Setting battery voltage point back to utility when selecting "SBU priority" in program 4 | Default: 46.0V<br>bUv [12] 46.0 v   | "Self-defined" is selected in program 8, the range is set from 44.0V to 54.0V, with an increment of 0.1V per click.  |
|    |  | Default: 10%<br>bUv [12] 10 %   | If "Lib" is selected in program 8, the range is set from 5% to 95%, with an increment of 5% per click.   |

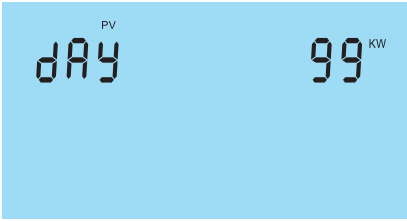
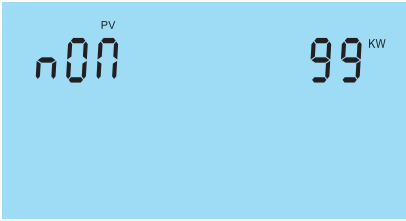
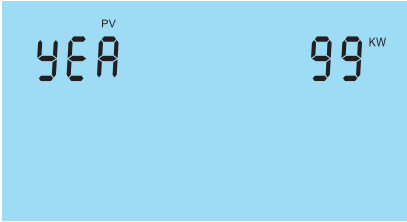
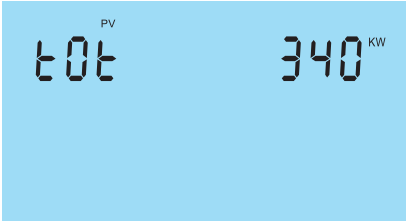
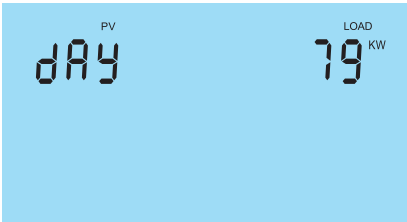
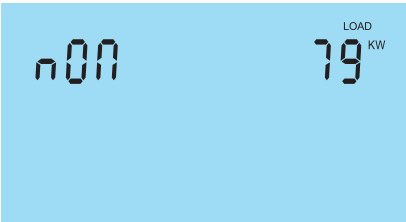
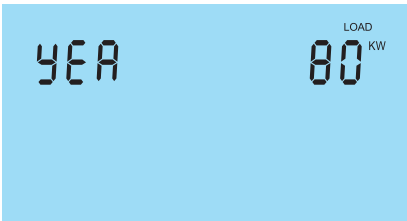
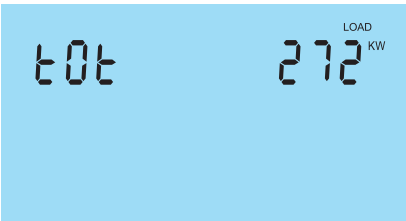
|    |   |   |   |
|----|---|---|---|
| 13 | Setting battery voltage point back to battery mode when selecting "SBU priority" in program 4 | Default: 54.0V<br>bbv [13] 54.0 v                   | "Flooded" or "Self-defined" is selected in program 8, the range is set from 48.0V to 60.0V, with an increment of 0.1V per click.                  |
|    |   | Fully charged<br>bbv [13] FUL %                     | Battery should be charged to float charging stage.  |
|    |   | Default: 30%(Lithium battery mode)<br>bbv [13] 30 % | If "Lib" is selected in program 8, the range is set from 10% to 100%, with an increment of 5% per click.  |
| 14 | Overload bypass function  | Disable (Default)<br>LbP [14] d1s                   | If it is enabled, the inverter will switch to utility mode if overload happens in battery mode.   |
|    |   | Enable<br>LbP [14] ENA                              |   |
| 15 | Overload restart function   | Disable (Default)<br>OLr [15] d1s                   | If it is enabled, the inverter will auto restart when overload occurs.  |
|    |   | Enable<br>OLr [15] ENA                              |   |
| 16 | Over temperature restart function   | Disable (Default)<br>Otr [16] d1s                   | If it is enabled, the inverter will auto restart when over temperature occurs.  |
|    |   | Enable<br>Otr [16] ENA                              |   |
| 17 | Backlight of LCD  | Disable<br>bL [17] d1s                              | If selected, LCD backlight will be off after no button is pressed for 60s.  |
|    |   | Enable (Default)<br>bL [17] ENA                     | If selected, LCD backlight will be always-on.   |
| 18 | Auto return to the first page of display screen   | Disable<br>bFP [18] d1s                             | If selected, the display screen will stay at latest screen user finally switches.   |
|    |   | Enable (Default)<br>bFP [18] ENA                    | If selected, it will automatically return to the first page of display screen (Input voltage/ output voltage) after no button is pressed for 60s. |

|  |                                    |                                   |  |
|--|------------------------------------|-----------------------------------|--|
| 19   | Buzzer Alarm                       | Disable<br>bEP [19] d15           | If selected, buzzer is not allowed to beep.  |
|  |                                    | Enable (Default)<br>bEP [19] ENA  | If selected, buzzer is allowed to beep.  |
| 21   | Energy stored data for PV and Load | Disable (Default)<br>ESd [21] d15 | If selected, inverter will erase all historical data of PV and Load energy, and stop record historical data for PV and Load energy.  |
|  |                                    | Enable<br>ESd [21] ENA            | If selected, inverter will record historical data for PV and Load energy. NOTE: Before selected, please double check if date and time is correct, if incorrect, please set date and time in program 22~27. |
| 22   | Time setting- Year                 | Year<br>YEA [22] 22               | Setting range is from 22 to 99.  |
| 23   | Time setting- Month                | Month<br>n00 [23] 1               | Setting range is from 1 to 12  |
| 24   | Time setting- Day                  | Day<br>DAY [24] 1                 | Setting range is from 1 to 31  |
| 25   | Time setting- Hour                 | Hour<br>HOU [25] 9                | Setting range is from 0 to 23  |
| 26   | Time setting- Minute               | Minute<br>n10 [26] 58             | Setting range is from 0 to 59  |
| 27   | Time setting- Second               | Second<br>SEC [27] 30             | Setting range is from 0 to 59  |
| Item 30 to 33 Sets the the smart load output interval. If the setting range is from 00:00 to 08:59, the smart load output will be turned on until 09:00. During this period, if the set value in item 34 or 35/36 is triggered, it will be turned off. (If the 34 time Settings work for 30 minutes, then 00:31, the the smart load output is off) |                                    |                                   |  |
| 30   | Start time setting-Hour            | Default : 0 hour<br>StH [30] 0    | Setting range is from 0 to 23.Increment of each click is 1 hour.   |

|    |   |                                      |   |
|----|---|--------------------------------------|---|
| 31 | Start time setting-Minute   | Default : 0 minute<br>Stn [31] 0     | Setting rage is from 0 to 59.Increment of each click is 1 minute.   |
| 32 | End time setting-Hour   | Default : 0 hour<br>ENH [32] 0       | Setting rage is from 0 to 23.Increment of each click is 1 hour.   |
| 33 | End time setting-Minute   | Default : 0 minute<br>ENN [33] 0     | Setting rage is from 0 to 59.Increment of each click is 1 minute.   |
| 34 | Setting discharge time on the smart load output if "Single" is selected in program 28.        | Disable (Default)<br>t1n [34] d15    | Setting range is from 0 min to 990 min. Increment of each click is 5 minute. This item is disabled by default. 'dis' indicates disabled<br>*If the battery discharge time achieves the setting time in program 30,31,32 and 33 and the program 35 or 36 function is not triggered, the output will be turned off. |
| 35 | Setting cut-off voltage point on the smart load output if "Single" is selected in program 28. | Default : 54V<br>n1V [35] 54.0V      | If "User-defined" is selected in program 08, this setting range is from 42.0V to 54.0V for 48V model. Increment of each click is 0.1V.  |
| 36 | Setting SOC percentage on the smart load output if "Single" is selected in program 28.        | Default : 60%<br>n1S [36] 60%<br>888 | If "Lib" is selected in program 08, this parameter value will be displayed in percentage and value setting is based on battery capacity percentage. Setting range is from 0% to 95%. Increment of each click is 5%.   |
| 37 | Turn on the second output when the inverter is back to Line Mode or Bypass Mode               | Disable<br>OPL [37] d15              | If selected, there is no effect on the second output When the inverter back to Line Mode or Bypass Mode   |
|    |   | Enable (Default)<br>OPL [37] ENA     | If selected, the output will turn on if second output is cut off due to setting in program 35 or 36   |







## Energy stored data Page

The energy stored data will be switched by pressing "UP" or "DOWN" key. The selectable information is switched as below order:

|   |   |
|---|---|
| <b>PV generated energy today</b><br>99 kWh<br>        | <b>PV generated energy this month</b><br>99 kWh<br>        |
| <b>PV generated energy this year</b><br>99 kWh<br>    | <b>PV generated energy current in total</b><br>340 kWh<br> |
| <b>Load consumed energy today</b><br>79 kWh<br>      | <b>Load consumed energy this month</b><br>79 kWh<br>      |
| <b>Load consumed energy this year</b><br>80 kWh<br> | <b>Load consumed energy in total</b><br>272 kWh<br>      |




## BMS information Page

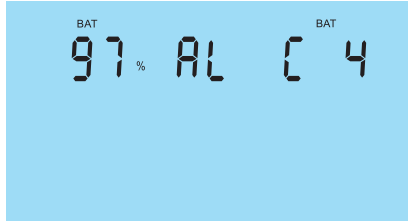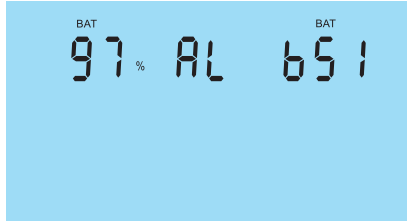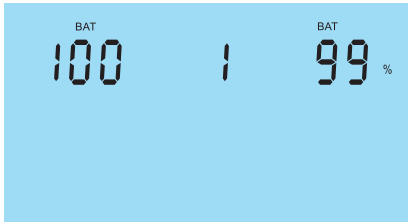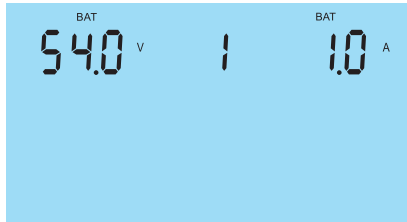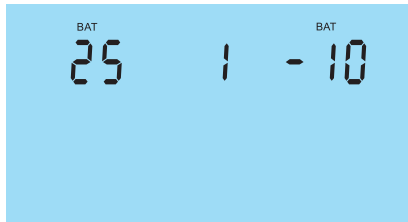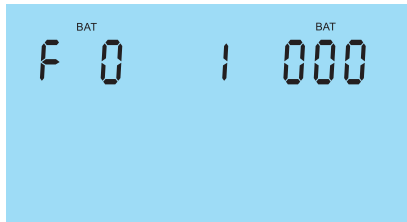The BMS information will be switched by pressing "UP" or "DOWN" key. The selectable information is switched as below order:

|  |   |
|--|---|
| <b>Mean SOC / Battery pack number / BMS status</b><br>Mean SOC is 97%, Connected Battery pack number is 4, BMS status is 51 (Check detail in warning code table). If BMS status occurred, it will be rolled with battery pack number automatically.<br>  |   |
| <b>BMS version / SOC</b><br>BMS version is 100, SOC is 99% on battery pack of address 1<br>   | <b>BMS voltage / current</b><br>BMS voltage is 54.0V, current is 1A on battery pack of address 1<br> |
| <b>BMS highest temperature / lowest temperature</b><br>BMS highest temperature is 25°C, lowest temperature is -10°C on battery pack of address 1<br>   | <b>BMS fault code / flag</b><br>BMS fault code is 0, flag is 000 on battery pack of address 1<br>   |

## Rated information Page

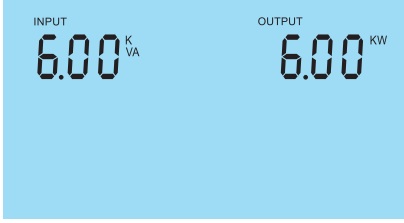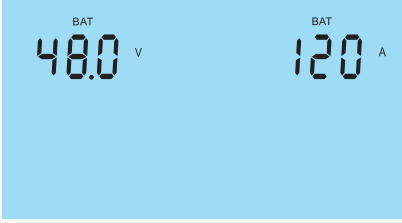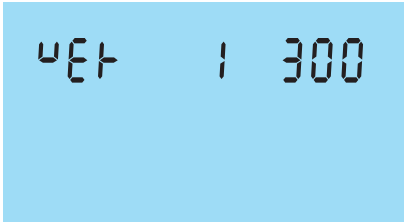


The rated information will be switched by pressing "UP" or "DOWN" key. The selectable information is switched as below order:




|   |  |
|---|--|
| <b>Rated VA / WATT</b><br>Rated VA is 6KVA, WATT is 6KW<br> | <b>Rated battery voltage / Max. charge current</b><br>Rated battery voltage is 48V, Max. charge current is 120A<br> |
| <b>Firmware version</b><br>Firmware version is 1300<br>     |  |

## Generator Port Use Setup Page

Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

Setting items:

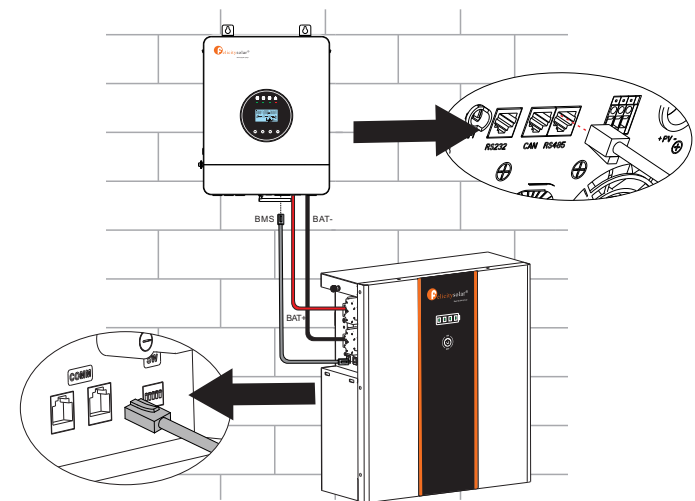
|    |                                    | Selectable option   |   |
|----|------------------------------------|---|---|
| 00 | Exit setting                       |  |   |
| 01 | Generator and smart load switching |  | The generator port can be switched to the smart load port, the default is the generator port "GEN". If you want to switch, first turn off the inverter switch so that the inverter is in standby state, and then switch to "SLd" when entering the interface. |
|    |                                    |  |   |

|    |                                  |   |  |
|----|----------------------------------|---|--|
| 02 | Generator charging enable        |  | This option is used by default, if you choose not to use, the generator cannot be charged  |
|    |                                  |  |  |
| 03 | Generator charging power setting |  | Press the "ENTER" key each time to select the value to change; Use the "UP" key to decrease the value and the "DOWN" key to increase the value<br>The maximum setting value is 50KW and the minimum setting value is 0.5KW<br>Default value is 6KW |


## Lithium Battery Communication

It's allowed to connect lithium battery and build communication only which it has been configured. Please follow below steps to configure communication between lithium battery and inverter.

1. Connect power cables between lithium battery and inverter. Please pay attention to the terminals of positive and negative. Make sure the positive terminal of battery is connected to the positive terminal of inverter, and the negative terminal of battery is connected to the negative terminal of inverter.
2. The communication cable is bundled with lithium battery. Both sides are RJ45 port. One port is connected to the BMS port of inverter and another one is connected to the COMM port of lithium battery.



Pin Assignment for BMS Communication Port


|       | BMS     |   |
|-------|---------|---|
| PIN 1 | NC      |  |
| PIN 2 | NC      |   |
| PIN 3 | CAN.L   |   |
| PIN 4 | CAN.H   |   |
| PIN 5 | RS485-B |   |
| PIN 6 | RS485-A |   |
| PIN 7 | NC      |   |
| PIN 8 | NC      |   |

3. Configure battery type to "Lib" in LCD setting No. 08.


The battery type is Lib

bat 08 lib

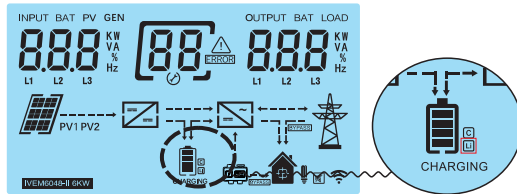
And then LCD will show you "Li" icon.



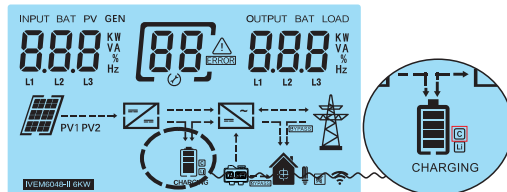4. Power up lithium battery and inverter. Wait a moment, if the communication is built between them, LCD will show you "C" icon as below.



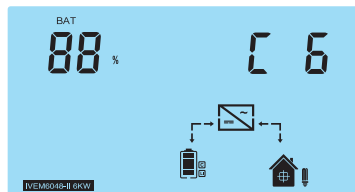5. Roll LCD real time information pages by pressing "UP" or "DOWN" button, as below page, you can see the parameters of SOC and battery pack units in the communication system.



This page means SOC is 88% and battery pack units are 6.

## Parallel Installation Guide (Only Valid for 6KVA Model)

### 1. Introduction

This inverter can be used in parallel with two different operation modes.


1. Parallel operation in single phase with up to 12 units. The supported maximum output power is 72KW/72KVA.
2. Maximum twelve units work together to support three-phase equipment. Ten units support one phase maximum. The supported maximum output power is 72KW/72KVA and one phase can be up to 60KW/60KVA.

**NOTE 1:** If this unit is bundled with share current cable and parallel cable, this inverter is default supported parallel operation. You may skip section 2.

**NOTE 2:** Under parallel operation modes, battery must be connected with inverters.

**NOTE 3:** Before starting up inverters, please connect all N wires of AC output together.
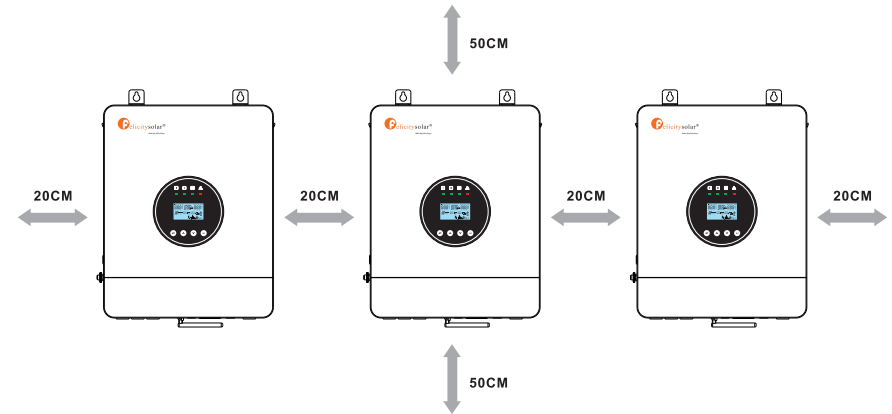
### 2. Mounting the Unit




**NOTE 1:** For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit. Be sure to install each unit in the same level.

**NOTE 2:** Don't connect PV panels with the ground.

**NOTE 3:** Make sure battery wires are in correct connection. Don't connect in reverse.


**NOTE 4:** PV is independent and cannot be connected to multiple machines in one PV.

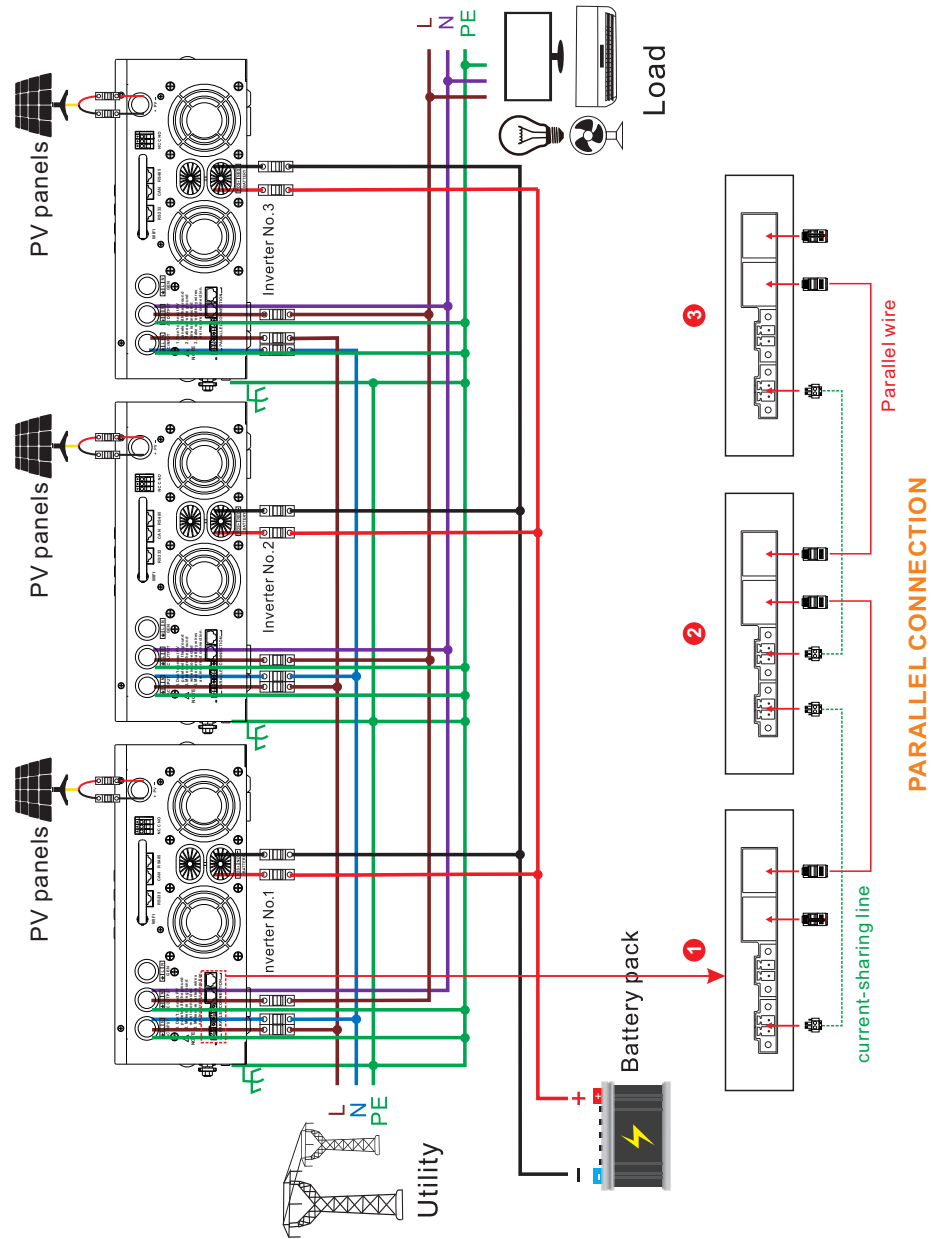Single Phase Parallel connection diagram for three inverters in parallel



- NOTE 1:** Before starting up inverters, please connect all N wires of AC output together
- NOTE 2:** Do not connect the AC input Neutral (N) wire to the AC output Neutral (N) wire
- NOTE 3:** Before starting up inverters, please connect all negative (-) wires of battery together.

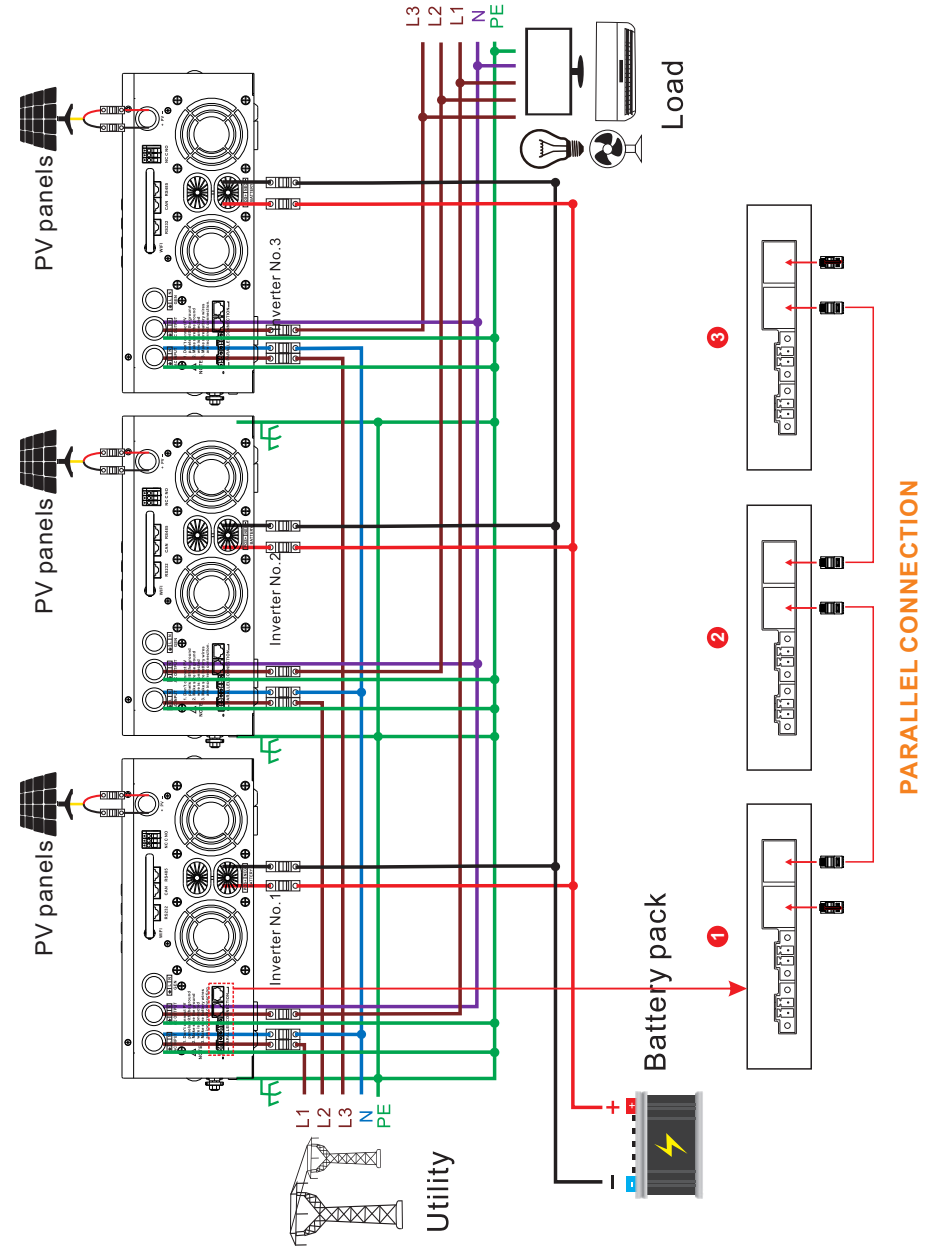
Three Phase Parallel connection diagram for three inverters in parallel



- NOTE 1:** Before starting up inverters, please connect all N wires of AC output together
- NOTE 2:** Do not connect the AC input Neutral (N) wire to the AC output Neutral (N) wire
- NOTE 3:** Before starting up inverters, please connect all negative (-) wires of battery together.



## Three Phase Parallel connection diagram for six inverters in parallel

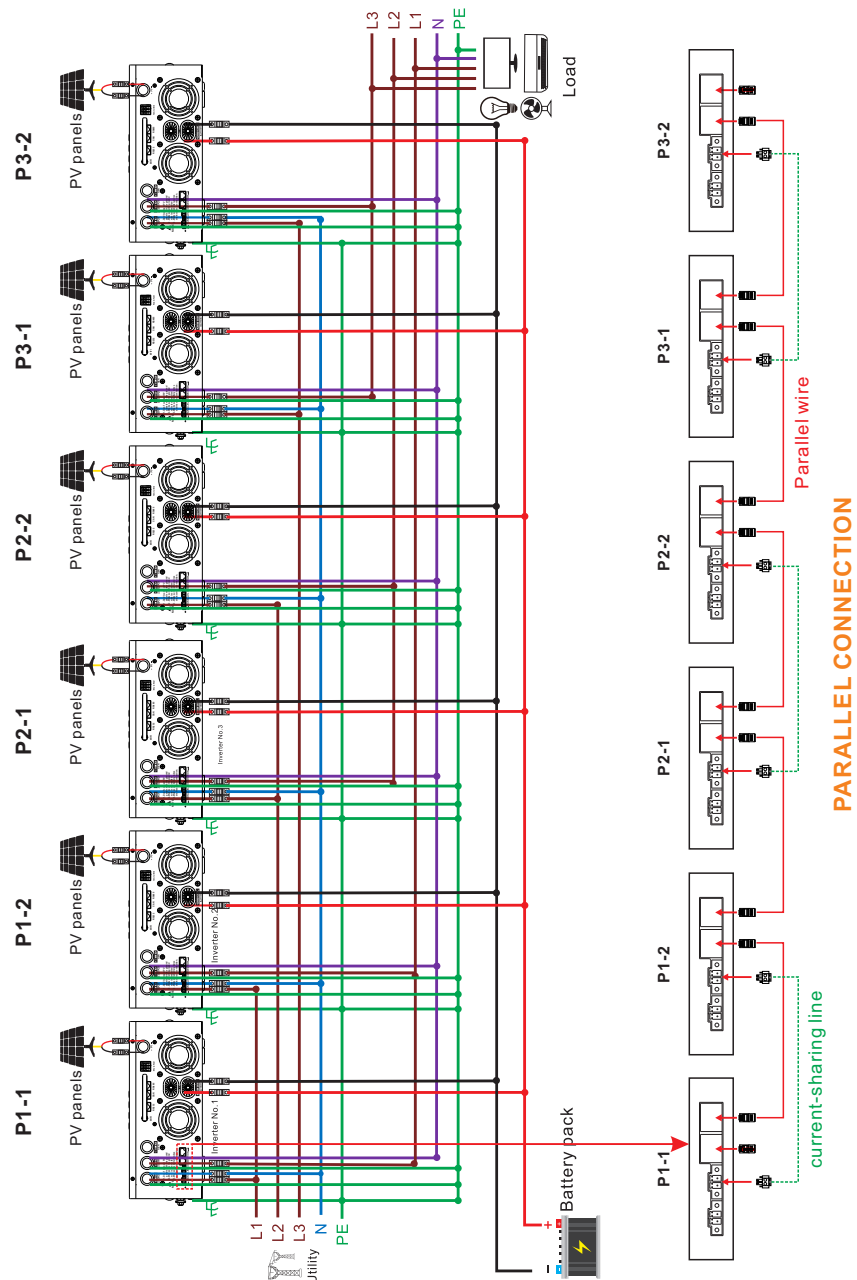

**NOTE 1:** Before starting up inverters, please connect all N wires of AC output together

**NOTE 2:** Do not connect the AC input Neutral (N) wire to the AC output Neutral (N) wire

**NOTE 3:** Before starting up inverters, please connect all negative (-) wires of battery together.

## 3. LCD Setting and Display

## Setting Program

|    |                |                      |  |
|----|----------------|----------------------|--|
| 28 | AC output mode | Single<br>[28] 510   | <p>When the units are used in parallel with single phase, please select "PAL" in program 28.</p> <p>It is required to have at least 3 inverters or maximum twelve inverters to support three-phase equipment.</p> <p>It's required to have at least one inverter in each phase or it's up to ten inverters in one phase.</p> <p>Please select "3P1" in program 28 for the inverters connected to L1 phase, "3P2" in program 28 for the inverters connected to L2 phase and "3P3" in program 28 for the inverters connected to L3 phase.</p> <p><b>Do NOT</b> connect share current cable between units on different phases.</p> <p>Before starting up inverters, please connect all N wires of AC output together.</p> |
|    |                | Parallel<br>[28] PAL |  |
|    |                | L1 Phase<br>[28] 3P1 |  |
|    |                | L2 Phase<br>[28] 3P2 |  |
|    |                | L3 Phase<br>[28] 3P3 |  |

## 4. Commissioning

## Parallel in single phase

Step 1: Check the following requirements before commissioning:

- Correct wire connection.
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 28 of each unit. And then shut down all units.

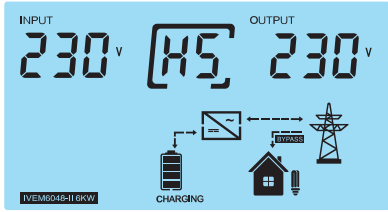
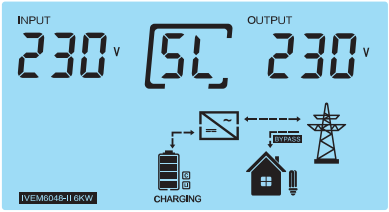
**NOTE:** To be safe, it's better to turn off switch when setting LCD program.

Step 3: Turn on each unit.

| LCD display in Master unit | LCD display in Slave unit |
|----------------------------|---------------------------|
|                            |                           |

**NOTE:** Master and slave units are randomly defined.

Step 4: Switch on all AC breakers of Line wires in AC input. It's better to have all inverters connect to utility at the same time. However, these inverters will automatically restart. If detecting AC connection, they will work normally.

| LCD display in Master unit  | LCD display in Slave unit   |
|---|---|
|  |  |

Step 5: If there is no more fault alarm, the parallel system is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

#### Support three-phase equipment

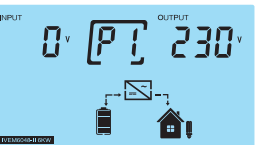
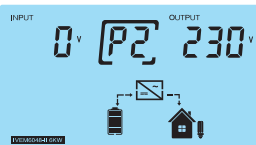
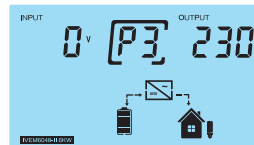
Step 1: Check the following requirements before commissioning:


- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.




Step 2: Turn on all units and configure LCD program 28 as P1, P2 and P3 sequentially. And then shut down all units.

**NOTE:** To be safe, it's better to turn off switch when setting LCD program.

Step 3: Turn on all units sequentially.

| LCD display in L1-phase unit  | LCD display in L2-phase unit  | LCD display in L3-phase unit  |
|---|---|---|
|  |  |  |

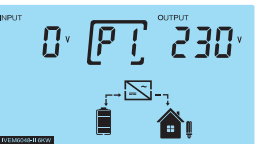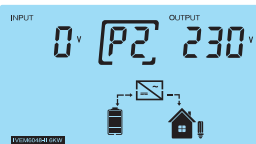Step 4: Switch on all AC breakers of Line wires in AC input. If AC connection is detected and three phases are matched with unit setting, they will work normally. Otherwise, the AC icon  will flash and they will not work in line mode.

| LCD display in L1-phase unit  | LCD display in L2-phase unit  | LCD display in L3-phase unit  |
|---|---|---|
|  |  |  |


Step 5: If there is no more fault alarm, the system to support 3-phase equipment is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

Note 1: To avoid overload occurring, before turning on breakers in load side, it's better to have whole system in operation first.


Note 2: Transfer time for this operation exists. Power interruption may happen to critical devices, which cannot bear transfer time.

## Warning Code Table

When fault event happens, the fault LED is flashing. At the same time, warning code, icon  is shown on the LCD screen.

| Warning Code | Warning Information                              | Audible Alarm                 | Trouble Shooting  |
|--------------|--|-------------------------------|---|
| 01           | Fan is locked.                                   | Beep three times every second | Check if the Fans wiring connected well. Replace the fan.                 |
| 02           | Overload   | Beep twice every second       | Reduce the loads.   |
| 03           | Low battery                                      | Beep once every second        | The battery voltage is too low, it should be charging.                    |
| 50           | BMS firmware version is not matched.             |                               | Upgrade the firmware of BMS.  |
| 51           | BMS doesn't allow inverter to charge battery.    |                               | Inverter will stop charging battery automatically.                        |
| 52           | BMS doesn't allow inverter to discharge battery. |                               | Inverter will stop discharging battery automatically.                     |
| 53           | BMS require inverter to charge battery.          |                               | Inverter will charge battery automatically.                               |
| 54~65        | BMS detect something wrong happened.             |                               | If the code is keeping for long time, please contact with your installer. |
| 80           | BMS communication fault                          |                               | Check if the communication line is connected well.                        |

## Fault Code Table

When fault event happens, inverter will cut off output, and the fault LED is solid on. At the same time, fault code, icon  and **ERROR** are shown on the LCD screen.

| Fault Code | Fault information                          | Trouble Shooting  |
|------------|--|---|
| 01         | Bus voltage is too high                    | AC Surge or internal components failed. Restart the unit, if the error happens again, please return to repair center. |
| 02         | Bus voltage is too low                     | Restart the unit, if the error happens again, please return to repair center.   |
| 03         | Bus soft start fail                        | Internal components failed. Restart the unit, if the error happens again, please return to repair center.             |
| 04         | Inverter soft start fail                   | Internal components failed. Restart the unit, if the error happens again, please return to repair center.             |
| 05         | Over current or surge detected by Software | Restart the unit, if the error happens again, please return to repair center.   |
| 06         | Over current or surge detected by hardware | Restart the unit, if the error happens again, please return to repair center.   |

|    |   |  |
|----|---|--|
| 07 | Output voltage is too low                   | Reduce the connected load.<br>Restart the unit, if the error happens again, please return to repair center.  |
| 08 | Output voltage is too high                  | Restart the unit, if the error happens again, please return to repair center.  |
| 09 | Output short circuited                      | Check if wiring is connected well and remove abnormal load.  |
| 10 | Overload time out                           | Reduce the connected load by switching off some equipment.   |
| 11 | Battery voltage is too high                 | Check if spec and quantity of batteries are meet requirements.   |
| 12 | Over current happen at DCDC circuit         | Restart the unit, if the error happens again, please return to repair center.  |
| 13 | PV voltage is too high                      | Reduce the number of PV modules in series.   |
| 14 | Short circuited happen at PV port           | Check if wiring is connected well.   |
| 15 | PV power is abnormal                        | Reduce the number of PV modules.   |
| 16 | Over current happen at PV port              | Restart the unit, if the error happens again, please return to repair center.  |
| 17 | Fan is locked                               | Check if wiring is connected well.<br>Replace the fan.   |
| 18 | Over temperature happen at PV circuit       | The temperature of internal PV converter component is over the limitation.<br>Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.      |
| 19 | Over temperature happen at battery circuit  | The temperature of internal battery converter component is over the limitation.<br>Check whether the air flow of the unit is blocked or whether the ambient temperature is too high. |
| 20 | Over temperature happen at inverter circuit | The temperature of internal inverter component is over the limitation.<br>Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.          |
| 21 | The inner temperature over                  | The inner temperature is over the limitation.<br>Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.                                   |
| 22 | DCDC current sensor failed                  | Restart the unit, if the error happens again, please return to repair center.  |
| 23 | No.2 DCDC current sensor failed             | Restart the unit, if the error happens again, please return to repair center.  |
| 24 | Inverter current sensor failed              | Restart the unit, if the error happens again, please return to repair center.  |
| 25 | OP current sensor failed                    | Restart the unit, if the error happens again, please return to repair center.  |
| 26 | Sharing current sensor failed               | Restart the unit, if the error happens again, please return to repair center.  |

|    |  |  |
|----|--|--|
| 27 | The AC input and output wires are inversely connected  | 1. Please check AC input and output wires are connected correctly.<br>2. If this error happens during parallel installation, please check wires connection. If they are connected correctly, please finish parallel installation first, and then restart inverters.<br>3. If the problem remains, please contact your installer.   |
| 28 | Single unit is installed to parallel system            | 1. Please check if single unit is installed to parallel system.<br>2. If this error happens during parallel installation, please check wires connection. If they are connected correctly, please finish parallel installation first, and then restart inverters.<br>3. If the problem remains, please contact your installer.  |
| 29 | DC/DC soft start fail.                                 | Restart the unit, if the error happens again, please return to repair center.  |
| 31 | Over temperature happen at convert H circuit           | The temperature of internal convert H component is over the limitation.<br>Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.   |
| 32 | Over temperature happen at LLC TX                      | The temperature of internal DC/DC TX is over the limitation.<br>Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.  |
| 33 | Over current happen at LLC circuit                     | Restart the unit, if the error happens again, please return to repair center   |
| 34 | DCDC Over current detected by hardware                 | Restart the unit, if the error happens again, please return to repair center.  |
| 35 | Overvoltage occurs in BUS                              | AC surge or PV surge or internal components failed.<br>Restart the unit, if the error happens again, please return to repair center.   |
| 40 | CAN data loss  | 1. Check if communication cables are connected well and restart the inverter.<br>2. If the problem remains, please contact your installer.   |
| 41 | Host data loss   |  |
| 42 | Synchronization data loss                              |  |
| 43 | Current feedback into the inverter is detected.        | 1. Restart the inverter.<br>2. Check if L/N cables are not connected reversely in all inverters.<br>3. For parallel system in single phase, make sure the sharing cables are connected in all inverters. For supporting three-phase system, make sure the sharing cables are connected in the inverters in the same phase, and disconnected in the inverters in different phases.<br>4. If the problem remains, please contact your installer. |
| 44 | The firmware version of each inverter is not the same. | 1. Update all inverter firmware to the same version.<br>2. Check the version of each inverter via LCD setting and make sure the CPU versions are same. If not, please contact your installer to provide the firmware to update.<br>3. After updating, if the problem still remains, please contact your installer.   |

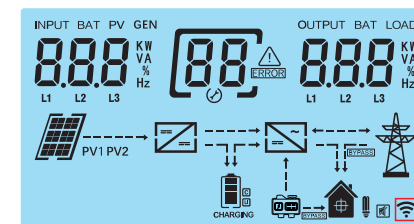
|    |   |   |
|----|---|---|
| 45 | The output current of each inverter is different. | <ol style="list-style-type: none"> <li>1. Check if sharing cables are connected well and restart the inverter.</li> <li>2. If the problem remains, please contact your installer.</li> </ol>  |
| 46 | AC output mode setting is different.              | <ol style="list-style-type: none"> <li>1. Switch off the inverter and check LCD setting program 28.</li> <li>2. For parallel system in single phase, make sure no 3P1, 3P2 or 3P3 is set on program 28. For supporting three-phase system, make sure no "PAL" is set on program 28.</li> <li>3. If the problem remains, please contact your installer.</li> </ol> |

## The Wi-Fi operation Guide in APP

### Introduction

Wireless communication between the off-grid inverter and the APP can be realized through the Wi-Fi module. The APP supports Android and iOS devices.

Delivers device status during normal operation.  
Allows device Settings to be configured on the APP.  
Notifies users when a warning or alarm occurs.  
Allows users to query inverter history data.



The status of the Wi-Fi sign on the LCD display  
After the APP is successfully connected, Wi-Fi indicator light remains constantly on

### Download and install APP

#### **Operating system requirement for your smart phone:**

- 🍏 iOS system supports iOS 11.0 and above
- 🤖 Android system supports Android 5.0 above

APP Download  
Please scan the following QR code with your smartphone to download the App.



The QR code supports Android system and iOS system

Operation Manual  
Please scan the following QR code with your smartphone to view the App Operation Manual



The QR code supports Android system and iOS system